


aspire

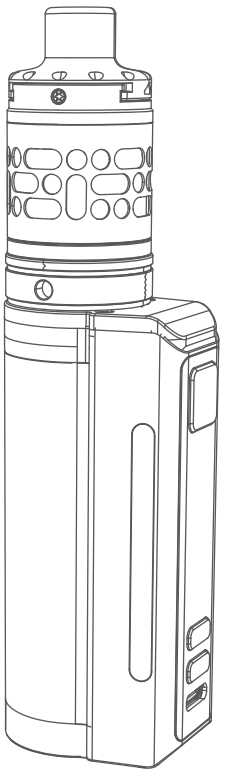

Zelos M80

Precision Vaping, Perfect Taste

User Manual

EN

DISCLAIMER

Please read this user manual before use. Failure to follow the instructions for proper setup, use, and care for your device can increase the risk of serious personal injury, death, or property damage.

The manufacturer assumes no responsibility for any damage caused by mishandling that is beyond normal usage defined in this manual.

RECOMMENDED SETUP

We recommend the exclusive use of Aspire original charger, battery, components, and accessories indicated on the product page and leaflet. Use of chargers, batteries, components, and/or accessories not specifically produced for this device may lead to malfunction and/or damage to the product and to the cancellation of the warranty.

HANDLING AND USAGE SAFETY

To reduce the risk of fire, shock, or damage to your vape device keep the product and its accessories away from overheated or excessively humid conditions (-5°C / 50°C).

Your device can be damaged if dropped, burned, punctured, crushed, or if it comes in contact with liquid. If you suspect damage to your device or its battery, discontinue use of your device, as it may cause overheating or injury.

To avoid misfiring always ensure you either lock or switch off your device when it is not in use, especially when carrying your device in your pocket, bag, or purse.

In the case of burnt or abnormal deformation of one of the components of the device or its accessories, stop using it immediately and contact Customer Care.

COIL MAINTENANCE SAFETY

In order not to damage the coil or burn the cotton do not inhale an empty pod. Let the pod/tank stand for 5 minutes after filling so the cotton can be saturated with e-liquid before use.

REPLACEABLE BATTERIES SAFETY

Do not use non-rechargeable batteries. Do not use damaged batteries or batteries with a torn or damaged wrapper. Disconnect the battery from the charger when fully recharged. Do not use your vape device while charging.

PRODUCT DISPOSAL SAFETY

Do not discard this product and battery in the environment, and only dispose of the product components at dedicated collection/disposal points.

HEALTH WARNING SAFETY


Do not use the product if you are pregnant, breastfeeding, generally ill, or suffer from respiratory and/or cardiovascular system disorders.

If you experience any side effects discontinue using the product. If the effect(s) continue after you stop using, consult a healthcare professional immediately.


Package Contents:

- 1* Zelos M80 Mod (2600 mAh)
- 1* Nautilus SSR Tank (4 mL)
- 1* Nautilus Meshed Coil 0.30 (Preinstalled)
- 1* Nautilus BVC Coil 1.80
- 1* Spare Drip Tip
- 1* Spare Tank Tube
- 1* O-ring/Pack
- 1* Type-C Cable
- 1* User Manual


Components View:

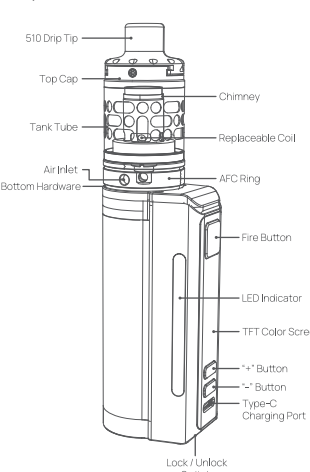

Coil Installation:

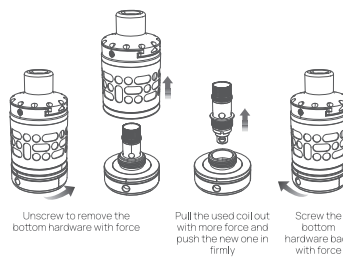


Tank Filling:

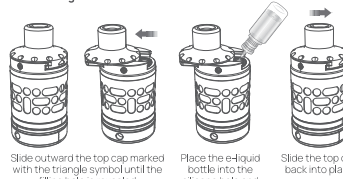


Note:

- When installing a new coil, let the tank stand for 5 minutes after filling so the cotton can be saturated with e-liquid before use.
- Do not let the tank become completely empty. Refill the tank to avoid dry burning or damage to the coil.

Tank Tube Replacement:

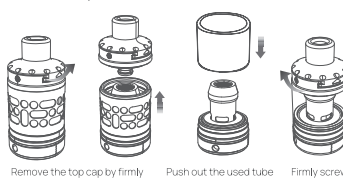

Remember to clean the condensation in the tank.

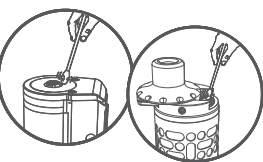

Instructions:

Mod Condition	Status of Indicator Light & Details
Turn on	Quickly press the fire button 5 times, the device will display "aspire".
Turn off	Quickly press the fire button 5 times, the device will display "GOOD BYE".
Lock or unlock "+" "-" buttons	Press the "+" "-" buttons simultaneously for 1.5s to lock or unlock the buttons. When the "+" "-" buttons are locked, only the fire button works.
Lock or unlock the mod	Toggle the lock/Unlock switch to "LOCK" icon, the mod will display "LOCKED" and enter dormant states. (Only turn on / off function allowed in this state). Toggle the lock/Unlock switch to "UNLOCK" icon, the mod will display "UNLOCKED" and enter the main interface. When the mod is locked, pressing any button will prompt the message: "SLIDE THE SWITCH".
Battery level indicate on screen	Battery level < 0%—empty bar Battery level < 0-20%—one bar Battery level < 21-40%—two bars Battery level < 41-60%—three bars Battery level < 61-80%—four bars Battery level < 81-100%—five bars

Parameters Setting:

- Press the "Fire" button and the "+" button simultaneously to enter the main menu adjustment.
- Press the "+" button to navigate through the options: MODE, ANIMATION, BRIGHT, LIGHT, PUFF, and EXIT.
- Press the "Fire" button to enter a submenu or a third-level menu, then use the "+" or "-" button to switch between options.
- Press the "Fire" button to confirm the settings.

Mode Setting:

Mode	Adjustment range	Operation and value setting
WATT	5-80W (Default: 5W)	Press "+" / "-" button 0.5W up / down per adjustment Long press "+" / "-" button 1W rapid up / down
VOLTAGE	0.5-8.4V (Default: 4.65V)	Press "+" / "-" button 0.01V up / down per adjustment Long press "+" / "-" button 0.1V rapid up/down
BYPASS	The device will output the most the mod can do with the resistance of the coil on it.	
CPS	5-80W (Default: 10W)	Press "+" / "-" button to select from the C1/C2/C3 Under C1/C2/C3 mode 0.5W up / down per adjustment

FR

AVERTISSEMENT

Veillez lire ce manuel d'utilisation avant utilisation. Le non-respect des instructions de configuration, d'utilisation et d'entretien de votre appareil peut augmenter le risque de blessures graves, de décès ou de dommages matériels.

Le fabricant n'assume aucune responsabilité pour tout dommage causé par une mauvaise manipulation hors du cadre de l'utilisation normale définie dans ce manuel.

CONFIGURATION RECOMMANDÉE

Nous recommandons l'utilisation exclusive du chargeur, de la batterie, des composants et des accessoires d'origine Aspire indiqués sur la page et la notice du produit. L'utilisation de chargeurs, de batteries, de composants et/ou d'accessoires non spécifiquement produits pour cet appareil peut entraîner un dysfonctionnement et/ou des dommages au produit et l'annulation de la garantie.

SÉCURITÉ DE MANIPULATION ET D'UTILISATION

Pour réduire les risques d'incendie, d'électrocution ou d'endommagement de votre vapoteur, éloignez le produit et ses accessoires des conditions de surchauffe ou d'humidité excessive (-5°C / 50°C).

Votre appareil peut être endommagé en cas de chute, de brûlure, de perforation, d'écrasement ou s'il entre en contact avec un liquide. Si vous pensez que votre appareil ou sa batterie sont endommagés, arrêtez d'utiliser votre appareil, car cela pourrait provoquer une surchauffe ou des blessures.

Pour éviter les mauvais allumages, assurez-vous toujours de verrouiller ou d'étendre votre appareil lorsqu'il n'est pas utilisé. Si vous pensez que vous transportez votre appareil dans votre poche, votre sac ou votre sac à main.

En cas de brûlure ou de déformation anormale de l'un des composants de l'appareil ou de ses accessoires, arrêtez immédiatement de l'utiliser et contactez le Service Client.

SÉCURITÉ D'ENTRETIEN DES RESISTANCES

Afin de ne pas abîmer la résistance ou brûler le coton n'insérez pas une pod vide. Laissez reposer le pod/atomiseur pendant 5 minutes après le remplissage afin que le coton puisse être saturé de e-liquide avant utilisation.

SÉCURITÉ DES BATTERIES REMPLAÇABLES

N'utilisez pas de batteries non rechargeables. N'utilisez pas de batteries endommagées ou de batteries dont l'emballage est déchiré ou endommagé. Débranchez la batterie du chargeur lorsqu'elle est complètement rechargée. N'utilisez pas votre appareil de vape pendant la charge.

SECURITE D'ELIMINATION DES PRODUITS

Ne jetez pas ce produit et la batterie dans l'environnement et ne jetez les composants du produit que dans des points de collecte d'élimination dédiés.

AVERTISSEMENT DE SÉCURITÉ SANTÉ


N'utilisez pas le produit si vous êtes enceinte, si vous allaitez, si vous êtes généralement malade ou si vous souffrez de troubles respiratoires et/ou cardiovasculaires.

Si vous ressentez des effets secondaires, arrêtez d'utiliser le produit, si les effets persistent après l'arrêt de l'utilisation, consultez immédiatement un professionnel de la santé.


Contenu:

- 1* Appareil Zelos M80
- 1* Atomiseur Nautilus 3SR
- 1* Résistance meshed Nautilus 0.30 (préinstallée)
- 1* Résistance Nautilus BVC 1.80
- 1* Drip tip de rechange
- 1* Tube en verre de rechange
- 1* Jeu de joint torique
- 1* Cable Type-C


Vue éclatée:

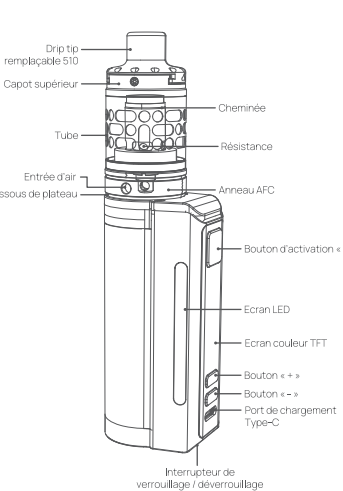

Remplacement de la résistance:

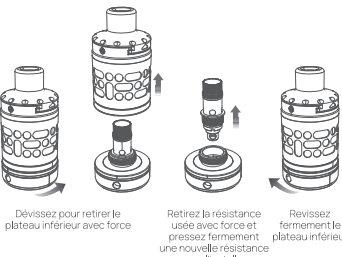


Remplissage de l'atomiseur:

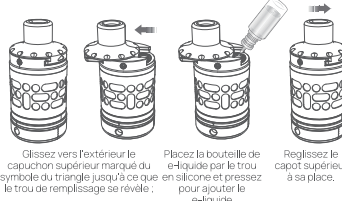


Remarque:

- Après installation d'une nouvelle résistance, attendez 5 minutes pour que le coton soit imbibé de liquide avant de l'utiliser.
- Ne laissez pas l'atomiseur devenir complètement vide. Remplissez-le pour éviter de brûler et d'endommager la résistance.

Remplacement du tube en verre:

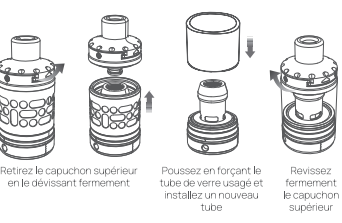

Pensez à nettoyer la condensation dans l'atomiseur.

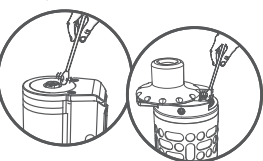

Instructions:

Appareil	Statut du voyant et détail
Allumer / Étendre	Appuyez rapidement sur le bouton d'activation « feu » 5 fois sous 2 secondes. L'appareil affichera "aspire" pendant 3 secondes.
Verrouillage ou déverrouillage boutons « + » et « - »	Appuyez simultanément sur les boutons « + » et « - » pendant 1.5 s pour verrouiller ou déverrouiller les boutons. Lorsque les boutons « + » et « - » sont verrouillés, seul le bouton de tir fonctionne. Basculez l'interrupteur de verrouillage / déverrouillage sur l'icône « LOCK ». L'appareil affichera "LOCKED" pendant 5S et entrera dans l'interface principale. Lorsque le mode est verrouillé, appuyez sur n'importe quel bouton pour afficher le message: «SLIDE THE SWITCH».
Verrouillage ou déverrouillage de l'appareil	Basculez l'interrupteur de verrouillage / déverrouillage sur l'icône « LOCK ». L'appareil est verrouillé. L'appareil affichera "UNLOCKED" pendant 5S et entrera dans l'interface principale.
Niveau de batterie indiqué sur l'écran	Tension < 3.3V (0%) → niveau vide 3.3V ≤ Tension < 3.5V (0-20%) → niveau un; 3.5V ≤ Tension < 3.7V (21-40%) → niveau deux; 3.7V ≤ Tension < 3.9V (41-60%) → niveau trois; 3.9V ≤ Tension < 4.0V (61-80%) → niveau quatre; 4.0V ≤ Tension ≤ 4.2V (81-100%) → niveau cinq.

Réglage des paramètres:

- Appuyez simultanément sur le bouton « Fire » et le bouton « + » pour accéder au réglage du menu principal.
- Appuyez sur le bouton « + » ou « - » pour naviguer entre les options: MODE, ANIMATION, BRIGHT, LIGHT, PUFF et EXIT.
- Appuyez sur le bouton « Fire » pour accéder à un sous-menu ou à un menu de troisième niveau, puis utilisez le bouton « + » ou « - » pour passer d'une option à l'autre.
- Appuyez sur le bouton « Fire » pour confirmer les réglages.

Setting:

Mode	Plage d'ajustement	Fonctionnement et réglage de la valeur
WATT	5-80W (Default: 5W)	Appuyez sur les boutons "+" / "-", ajustement de 0.5W haut/bas Appuyez longuement sur le bouton "+" / "-", ajustement rapide par palier de 1W haut/bas Appuyez sur les boutons "+" / "-", ajustement de 0.01V haut/bas
VOLTAGE	0.5-8.4V (Default: 4.65V)	Appuyez longuement sur le bouton "+" / "-", ajustement rapide par palier de 0.1V haut/bas
BYPASS	L'appareil produira le maximum de puissance que la résistance en place accepte.	
CPS	5-80W (Default: 10W)	Appuyez sur le bouton « + » / « - » pour sélectionner à partir du C1/C2/C3 Sous les modes C1/C2/C3 appuyez sur les boutons "+" / "-" Ajustement de 0.5W haut/bas

TC	200-600°F / 100-316°C (Default: 200°F)	Press "+" / "-" button to select from the TC/NTC/TTTC/SS	1°C / 1°F per adjustment
		Press "+" / "-" button	It will switch to 100°C
		Press "-" button at 100°C	It will switch to 200°F
		Press "+" button at 350°C	It will switch to 200°F
		Press "-" button at 600°F	It will switch to 100°C

Safety Features:

Vaping Over-Time Protection (10s)	The screen will display "TOS OVER TIME"
Open Circuit Protection	The screen will display "CHECK ATOMIZER"
Short Circuit Protection	The screen will display "LOW RES"
Low Voltage Protection	The screen will display "BATTERY LOW"
Overcharge Protection	The device will stop charging
Over Heat Protection	The screen will display "TOD HOT"
Abnormal Charge Protection	The screen will display "CHECK USB"

Charging :

Maximum charge current	2A
Recommended charge voltage	5V
Attach the type-C cable	The screen will display a growing battery icon
Fully charged	The screen will be on for 10S and then shut off
The charging voltage is over 6V or lower than 4.2V	The mod will stop charging and the screen will display "CHECK USB" for 5s
If you press the fire button while charging, the battery will stop charging to ensure safety	

IMPORTANT INFORMATION ABOUT USING NICOTINE-CONTAINING E-LIQUIDS

Before using nicotine-containing e-liquid the user should read the following information carefully.

1. NICOTINE-CONTAINING E-LIQUID

If used with nicotine-containing liquid, it should be noted that nicotine which is a highly addictive substance and, therefore, is not recommended for use by non-smokers may produce toxic effects if consumed orally, especially in infants or children. Do not use if you are allergic to nicotine or any of the other ingredients contained within the e-liquid (see manufacturer's label for full details).

2. NICOTINE WARNINGS AND PRECAUTIONS

Nicotine-containing E-liquid is not recommended for:

- Non-smokers
- Young people under the legal age
- Pregnant or breast-feeding women; as nicotine is known to cross the placenta and to be excreted in breast milk.

3. CONTRAINDICATIONS

• Those experiencing general ill health; such as heart disease, stomach, and duodenal ulcers, liver or kidney problems, long term throat disease, or difficulty breathing due to bronchitis, emphysema, or asthma

• Those who have an overactive thyroid gland or have a pheochromocytoma (a tumor of the adrenal gland that

WARRANTY

Please visit our official website below to know our warranty policy and find an official after-sale support center in your country: <https://www.aspirecg.com/support/service-center/>

If your region doesn't have a support center, you can contact the retailer for service as normal.

Important Information:
When requesting for warranty claims, kindly provide receipts or invoice purchased from vendor. Please also keep the original box containing the serial number and security code, or batch code for verification.

For detailed operating instructions, please visit: Manual: <https://www.aspirecg.com/support/download> Video: <https://www.youtube.com/c/Aspirecigs>

Shenzhen Eigate Technology Co., Ltd.
Floor 1-4, Building 3, No.14 Jian'an Road, Shajing Sub-district, Bao'an District, Shenzhen, Guangdong Province, China
Tel: +86-755-81499783
Email: service@aspirecg.com

To learn more about our products and how to use, please visit: www.aspirecg.com