

VOID

VAPORIZER

MANUAL

FEEL AND FILL THE
VOID OF YOUR LIFE

XEO®
satisfaction! engineered in germany

XEO Distribution GmbH Vinnhorster
Weg 137
30419 Hannover / GERMANY
Tel.: +49-(0)511-215862-0

Designed by XEO in Germany
Assembled in China

INSTRUCTION MANUAL:

Thank you for purchasing the XEO VOID StarterKit Vaporizer! We are sure that this device will enhance your vaping experience. To get the most out of your vaporizer, read the following instructions thoroughly. Your satisfaction is important to us! Please contact us with any concerns or feedback.

The XEO VOID StarterKit is certified with the ISO 8317 by the IVM VerpackungsMarktforschung for its childproof Design.

CONTENT

A Safety Information B Function and Features C Product Components
D Battery E User Instruction F Notice
G Guarantee

A:SAFETY INFORMATION

Read the following information carefully for safe and effective use of the product and accessories.

Contra-Indication / warning

This information and the use of our products are intended for consumers of legal age and not by non-smokers, pregnant or nursing women, persons with a heart

jects. Any collision or squeezing should be avoided. Do not break or disassemble your XEO VOID StarterKit and don't use any lighter or matches. Store the XEO VOID Vaporizer in a dry, clean and cool place outside of direct sunlight.

Prior every use, inspect the product to ensure that no signs of damage occurred. Use supplied accessories only

The supplied accessories are engineered and designed to operate within its operational and safety requirements. Do not use any charging device that has not been created by XEO.

Use of non-supplied accessories could damage the product.

B: FEATURES AND FUNCTIONS

- Certified with the ISO 8317 by the IVM VerpackungsMarktforschung for its childproof Design
- No heat or ignition, no fire hazards.
- Innovative All-in-One Design with inner laying Spiral-Design in the mouth piece that prohibits leakage

- Childproofed due to 5-Time On/Off Switch and tank's seal

- Short Circuit Protection:

1. When the short circuit occurs before power is applied, the button light flashes for 5 times and then powers off.


D:BATTERY

When battery is empty, the firebutton light will blink quickly while pressing it. In order to charge the battery, please use the USB cable and connect it e.g. to a computer. While charging, the LED light will be red. When fully charged, the light will turn off.

E:USER INSTRUCTION

Due to the XEO VOID StarterKit's All-in-One structure the device is leakage free. The built-in 2ml tank is childproof and can only be opened by simultaneously pressing down and turning the cap. By clicking the firebutton 5-times in rapid succession, the device is turned on.

Power on and off : Press the button 5 times in quick succession, the button light will flash 5 times to indicate XEO VOID is ready for use. In the same way, press the button 5 times to turn off the XEO VOID.

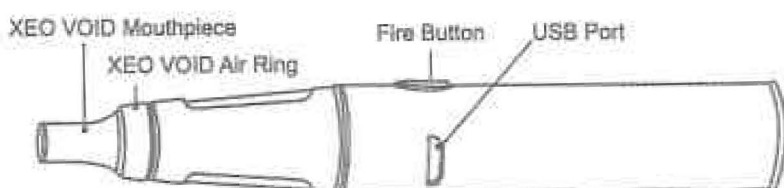

clockwise to adjust the air inflow. The air inflow will decrease/increase when turning left or right.

F: NOTICE

1. XEO VOID StarterKit

- XEO VOID sub coil will only work with batteries that support sub ohms.
- Please power-off XEO VOID when not in use.
- Do not press the button if XEO VOID is not in use.
- Only have your XEO VOID repaired by XEO. Do NOT attempt to repair it on your own as it may lead to further damage to the item and/or personal injury.
- XEO VOID should be operated in dry conditions between temperatures of -10°C (14°F) to 60°C (140°F) and charged between 0°C (32°F) to 45°C (113°F).
- XEO VOID is designed with authentic XEO components. Applying XEO VOID with unauthorized components may cause the device to function improperly and/or lead to damage.
- Keep the filled Vaporizer out of reach of children.
- Please ensure that the E-Liquid is not coming in contact with your mouth.
- The XEO Vapor E-Liquid follows a predefined formula. Mixing with other E-Liquids is not recommended.
- Store in dry and low temperature environments.

G: WARRANTY

Please consult your XEO product warranty card. We are not responsible for any damages caused by human error. Our warranty is not available for products purchased from third party vendors.

XEO agrees to provide repair under warranty pursuant to the following:
Terms and Conditions:

1. This warranty provides a free of charge repair for defective XEO brand merchandise. Warranty period is 90 days from date of purchase by the end user.
2. This warranty may be void as a result of any of the following conditions:
 - *Customer does not provide warranty card and original receipt of purchase.
 - *Merchandise failure or damage is caused due to improper use or unauthorized repair.
 - *Merchandise failure or damage as a result of excessive force such as dropping.
 - *Merchandise failure or damage as a result of usage outside of recommended operating conditions (see precautions in usage manual).
 - *Merchandise failure or damage caused by improper use of water or other liquid (see usage manual for operating instructions).
 - *Merchandise failure or damage due to usage with non-XEO components (charger, battery, and power cable).

Note

This product may be hazardous to health and is intended for use by adult smokers. If used with E-Liquid containing nicotine: Nicotine is an essential constituent of the tobacco plant which affects the nervous system. Among other things it is harmful for heart, blood pressure and coronary arteries. Nicotine has a highly addictive effect and is apart from that, toxic (lethal) in case of sufficiently high dosages for all routes of exposure. The XEO VOID contains small parts and could present a choking hazard. If you have a medical condition, are pregnant, planning to become pregnant, are breastfeeding, have cardiovascular disease, have renal or hepatic impairment, have adrenal or thyroid gland disorders, have diabetes or lung disorders, do not use our product. Seek medical advice in case of any adverse effects. In the unlikely event that any E-Liquid should come into contact with skin, wash with plenty of water. Do not use the XEO VOID product in high-oxygen environments, especially when using home-oxygen therapies. Please also refer to any information provided with and relating to any E-Liquid used with this product.

Recycling and Disposable

The XEO VOID product in scope of the EU WEEE Directive are labelled with a crossed-out "wheelie-bin" symbol as required by this directive. The symbol indicates that the product was placed on the market after August 13, 2005, and that end users should segregate the product from other waste at end-of-life. This symbol on a XEO

disease or related risks, persons with high blood pressure or diabetes, or persons who are on medication for asthma or depression. Sale to children and young people under the age of 18 years is prohibited.

Information about effects on health and addictive effects

If your XEO E-Liquid contains nicotine (see label) the following applies:

Nicotine can increase the risk of a heart attack and high blood pressure, and may cause feelings of dizziness, nausea and stomach pains. Do not use the product if any of these symptoms apply to you. Nicotine is addictive. It's recommended that the user stores and uses the Vaporizer horizontally to prevent inhaling the unvaporized E-Liquid into the mouth, which could cause irritation to your oral mucous membranes.

Toxicological data

Nicotine is poisonous in contact with skin or if swallowed. Nicotine is poisonous for water organisms and has a long-term effect.

Precaution

Please avoid hot or damp environments when you store or use the product. When carrying the E-Cigarette in your pocket, keep the product separate from other ob-

2. When the short circuit occurs during use, the button light flashes for 3 times before short circuit (reset).

- Atomizer Protection:

XEO VOID has a 15 second run time protection. The light will flash 10 times if the button is pressed for more than 15 seconds.

- Low Voltage Protection:

If the battery voltage drops lower than 3.3V, the button light flashes 40 times and the device will power-off. Charge the device before you use it again.

- Resistance Test:

1. If the resistance at the output end is greater than 50ohm, the light flashes slowly if you press the button.
2. If the resistance at the output end is lower than 0.3ohm, the light flashes quickly 5 times, indicating the ohms resistance is too low or potential short circuit.

- Battery Display Function:

The light will flash slowly or stay lit when battery quantity is high, on the contrary, the light flashes in frequency when battery is low. The battery light keeps in red when charging or connected with USB, and goes out when it is fully charged.

C:PRODUCT COMPONENTS

1x XEO VOID 1500mAh Battery + 2ml Tank, 1x 0.5 Ohm and 1x 1.0 Ohm XEO VOID Atomizer Head, 1x Micro-USB 2.0 Cable, 1x User Manual

Vaping: Press the button and inhale. Release the button when you stop inhaling.

Filling with E-Liquid: Press down and unscrew the atomizer cap, then inject the liquid directly into the chambered slot which is of 2ml E-Liquid capacity.

NOTE:

1. Please don't overfill beyond the Max mark to avoid overflow when reassemble.
2. Please drip a few drops of e-liquid to the atomizer head before its first use to avoid dry burn.

Atomizer Head Replacement: With childproof lock, please press the cap to unscrew the atomizer cap. The atomizer head (with natural cotton) is located on the cap, just unscrew it and replace and/or clean it. (NOTE: Please do not wash the atomizer head with water. Simply scrub it with alcohol cotton or a clean dry cloth.)

Adjusting Airflow: Rotate the ring on the atomizer cap clockwise or counter-

Battery Quantity	60%-100%	30%-59%	10%-29%	0-9%
Light Condition	Stay lit	Slowly flashes	Moderately flashes	Flashes in frequency

2. Battery

- If battery acid is leaking, avoid all contact with skin and eyes. If the battery acid does come into contact with eyes or skin, DO NOT RUB YOUR EYES. Immediately rinse your eyes and skin with clean water and consult a doctor. DO NOT use or charge the battery again!
- If the battery's color changes or if the battery starts to swell or its shape changes, please remove the battery from the product and disconnect it from the electricity supply. DO NOT use or charge the battery again!
- Do not try to alter or damage the battery by piercing or opening it with any kind of tool.

3.Charger

- Do not use in high-temperatures or damp environments.
- Do not charge outdoors.
- Do not leave the charger connected to the power source for an extended period of time. Once the battery is fully charged, remove it from the power source in order to avoid any unforeseen situations.



3. This warranty does not cover personal items or consumable goods and attachments, including but not limited to: mouthpiece, cartridge, atomizer head, lanyard, and leather sheath.

4. This warranty does not cover any non-XEO brand products. This warranty is only valid for eligible XEO brand products during the warranty period of 90 days after date of purchase as indicated on proof of purchase.

XEO reserves the right of final decision in all warranty cases. XEO may interpret and revise the content of this warranty terms.

WARNING: Keep away from children. Not suitable for people under the age of 18 years.

Not suitable for pregnant or nursing women. Not suitable for people who don't smoke tobacco cigarettes.

For more information go to > xeovape.com

product or packaging means that the product should not be disposed of with your other household waste. It is your responsibility to dispose of your waste equipment separately from the municipal waste stream.